
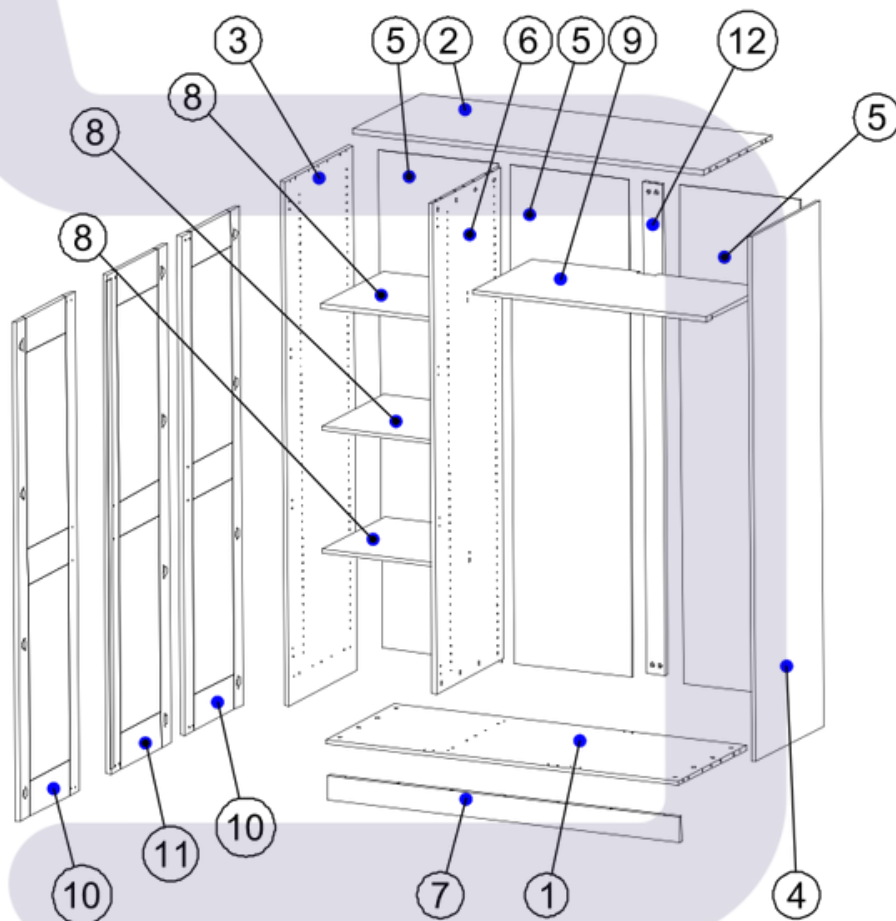



Šatní skříň TINA3


L681-D

Přírodní dřevo se může kvůli povaze materiálu mírně deformovat.
Montáž způsobí, že se díly opět narovnájí.





A  Ø 8x30 18	B  39	C  1	D  39	E  Ø 6.3x13 12	F  12	H  2x80	I  12	K  6
L  Ø 5x13 38	M  3	N  3	O  Ø 3x13 12	P  30	R  R1 6 6	S  Ø 3.5x16 12	G  M4x25 6	






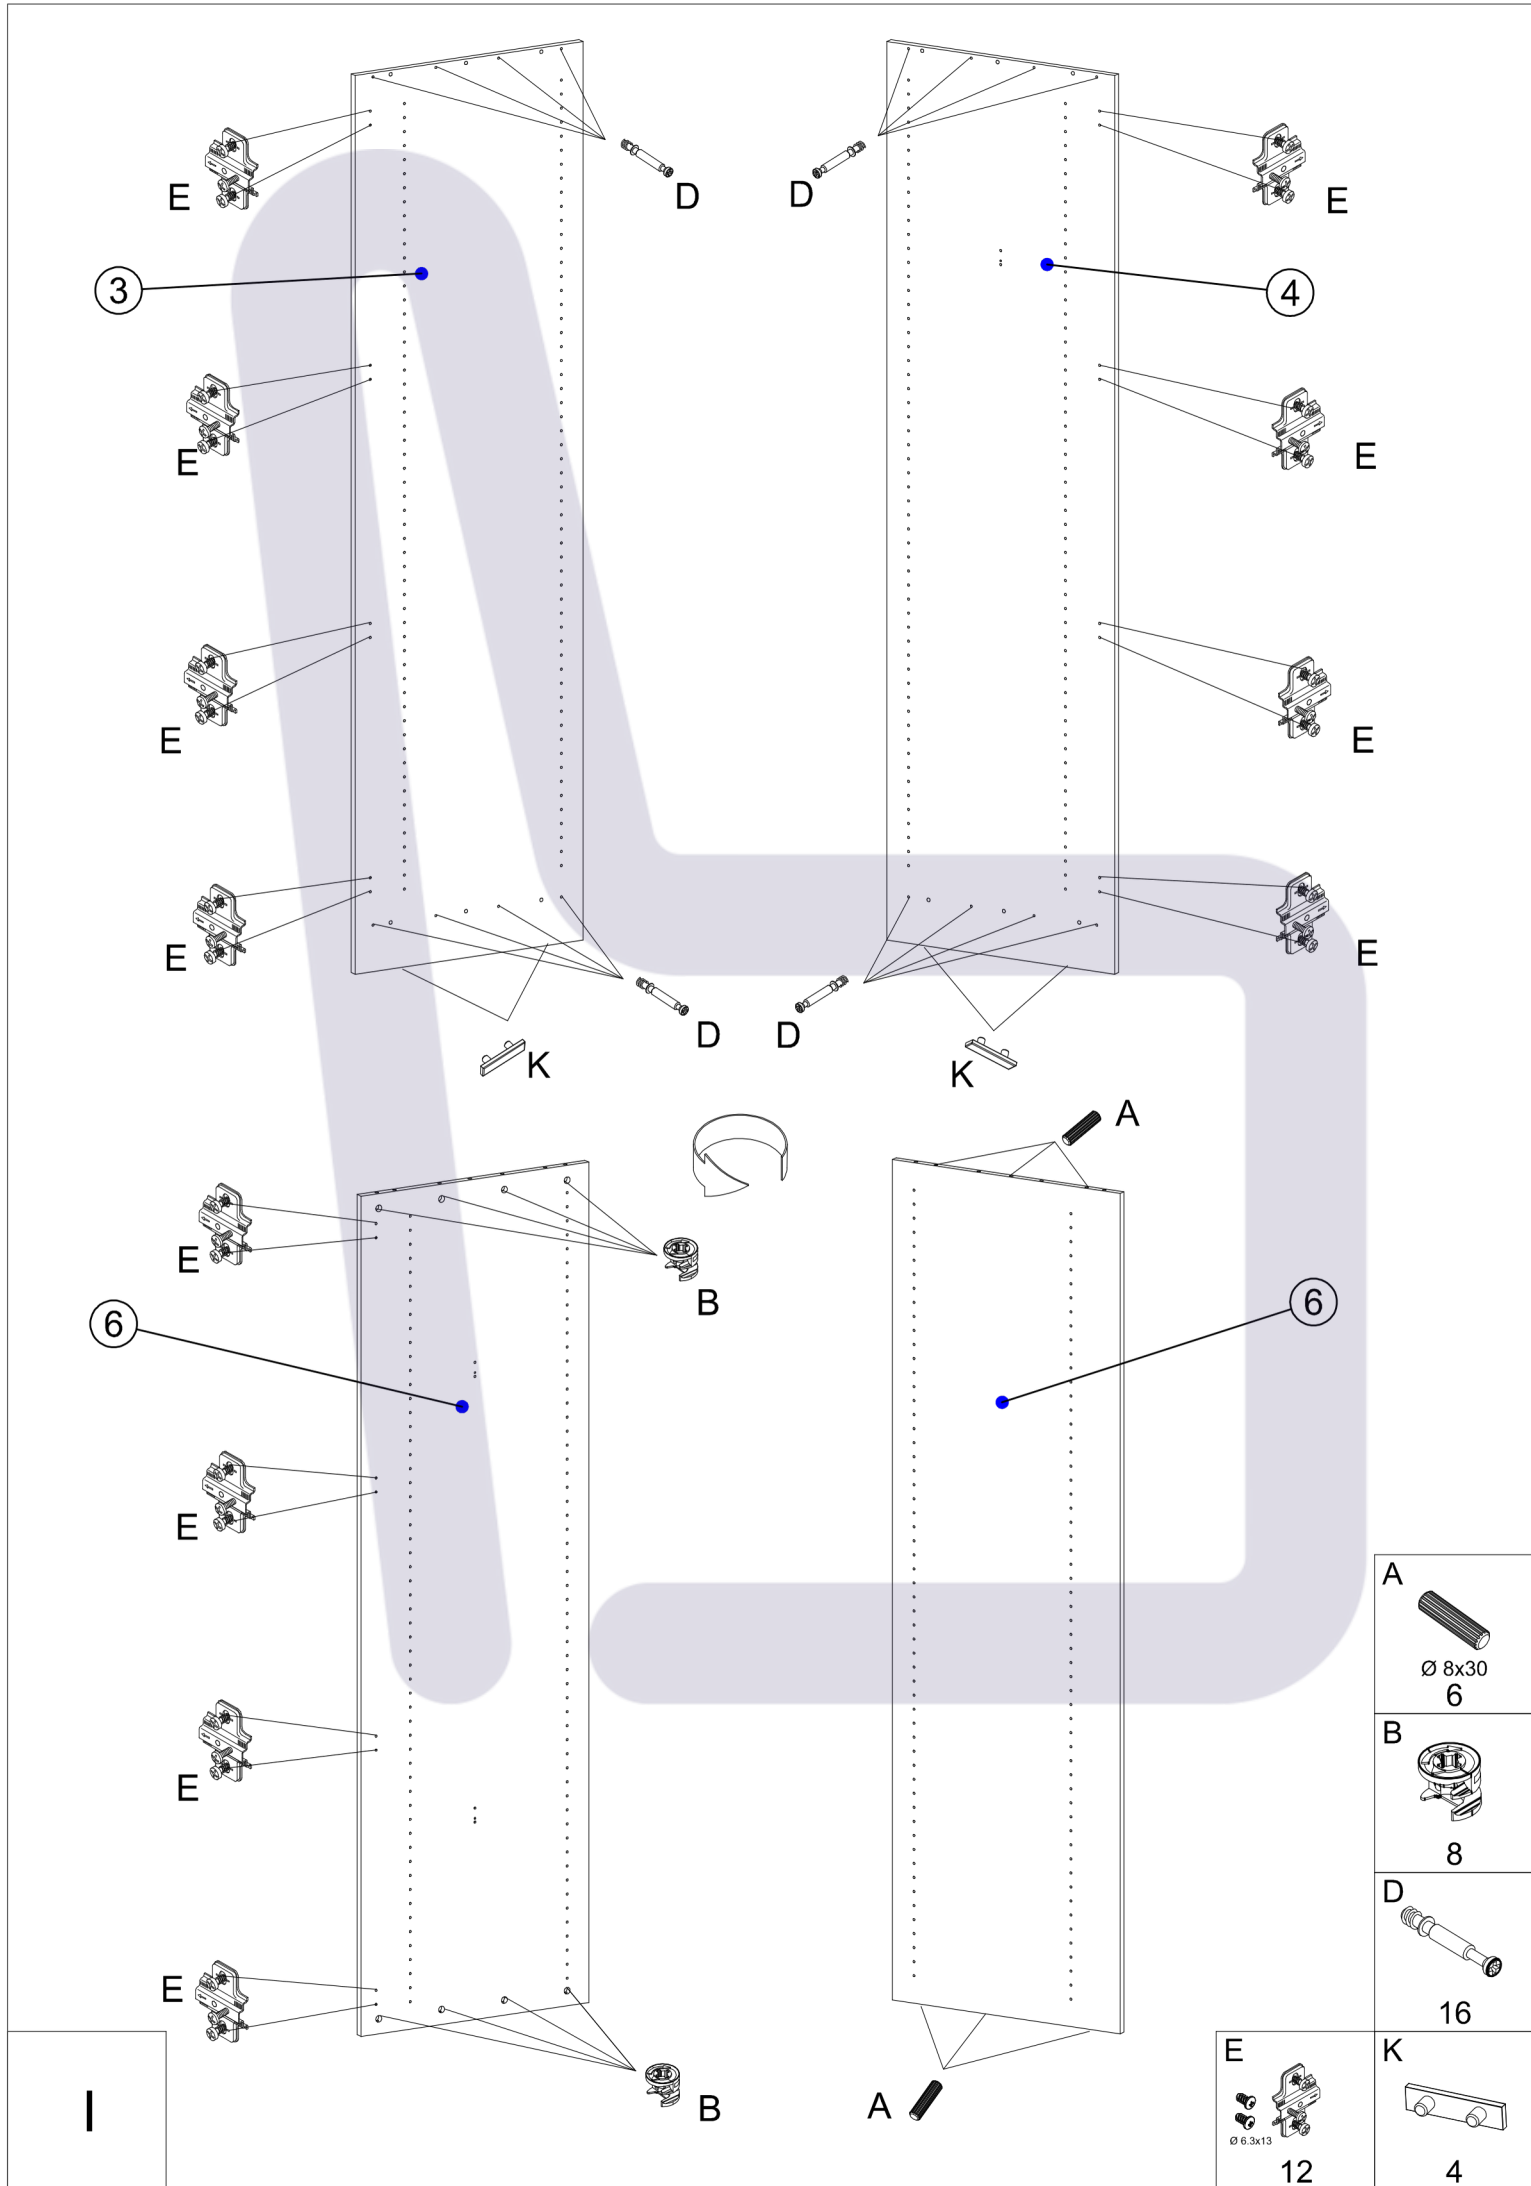



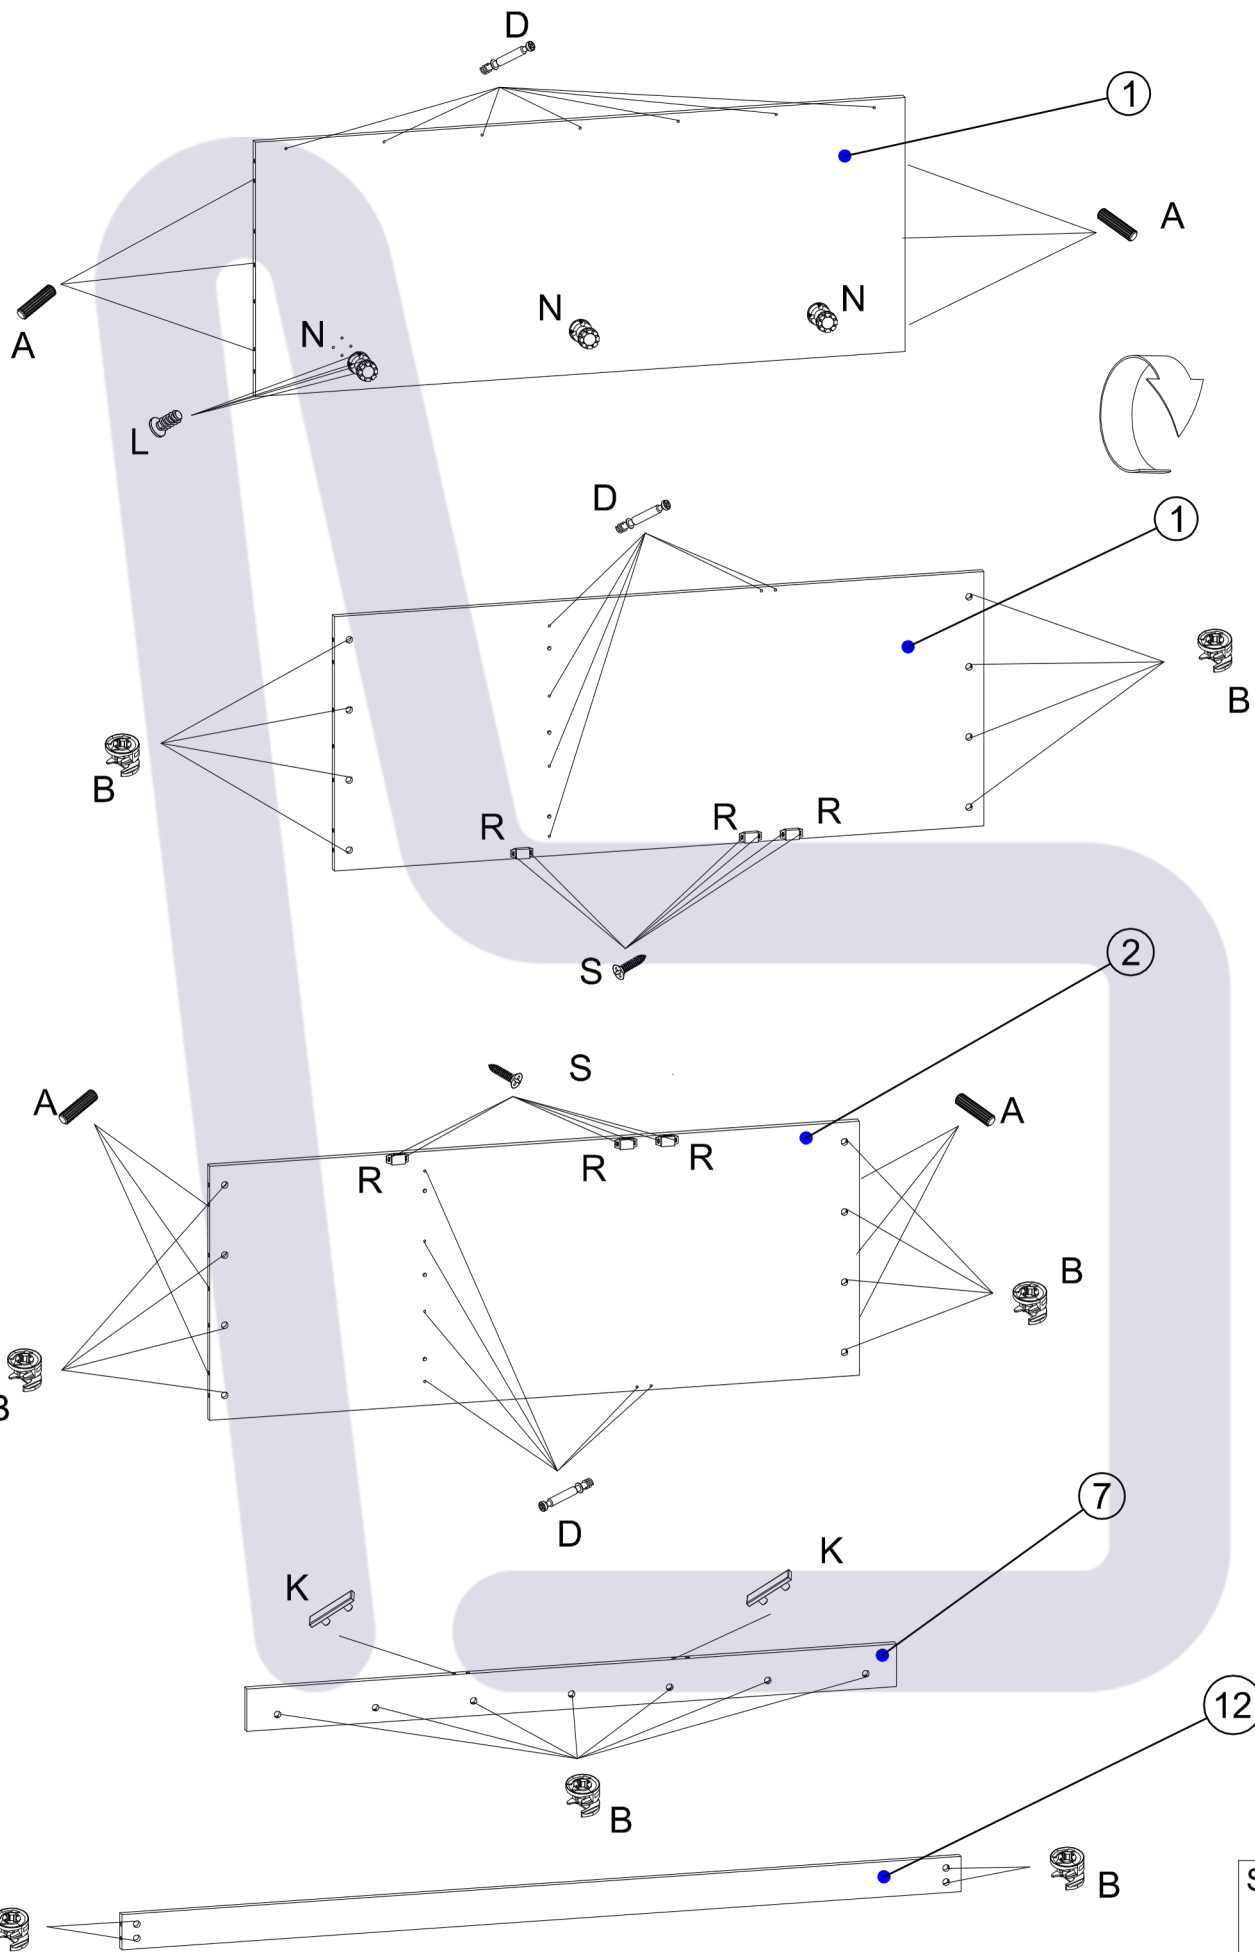


S


 Ø 3,5x13
 12

A  Ø 8x30 6	B  27	D  19	K  2	L  Ø 5x13 12	N  3	R  6
--	---	---	---	---	--	--

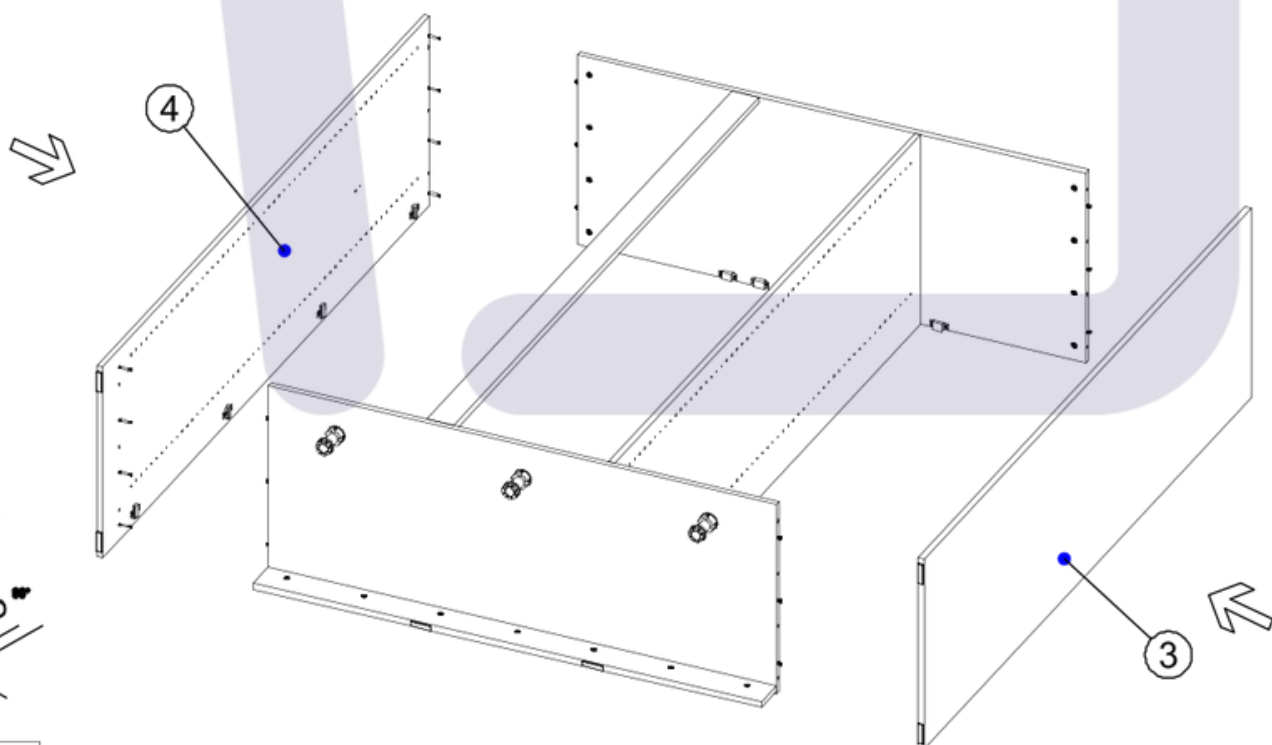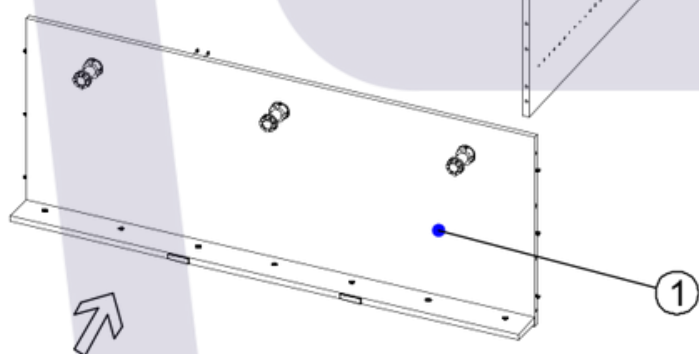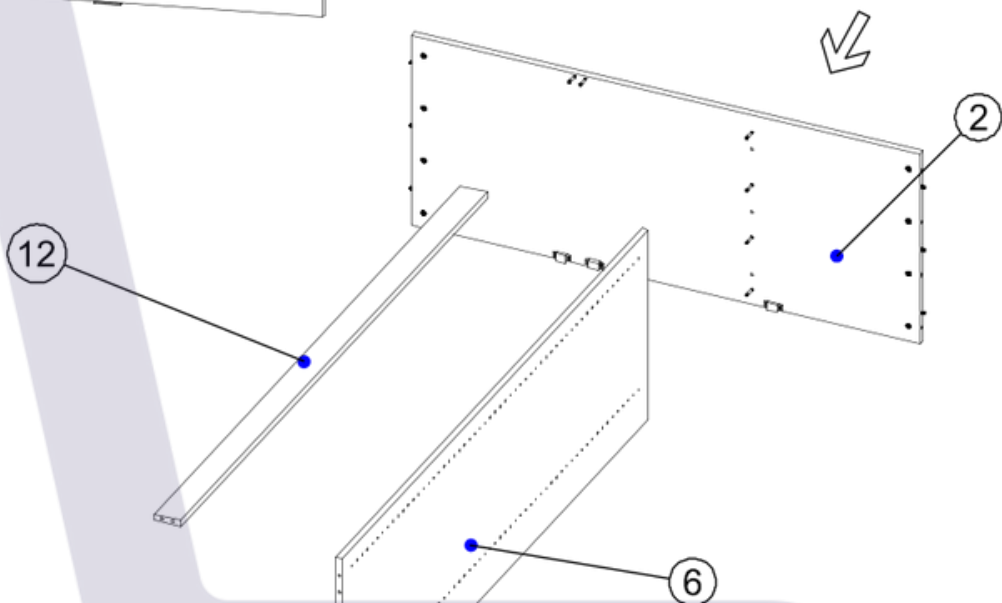
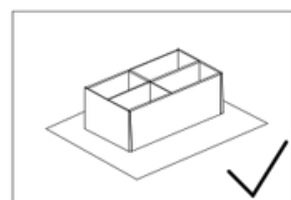
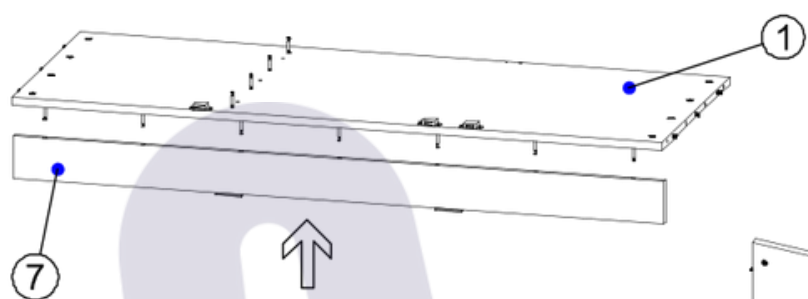


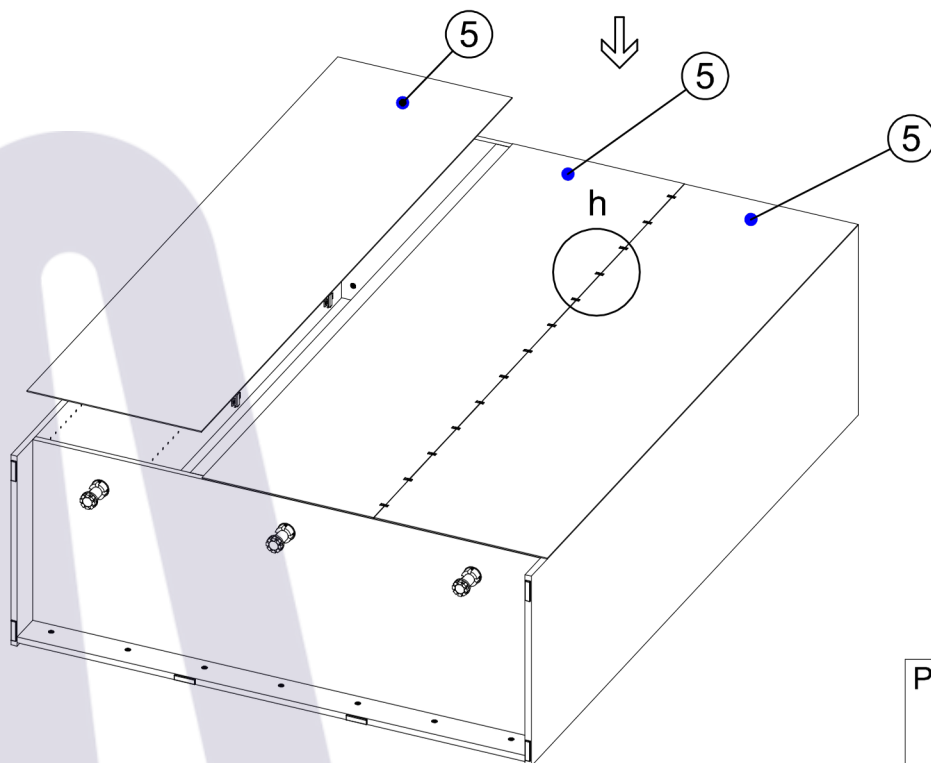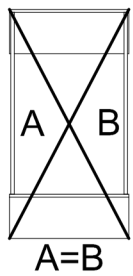


h

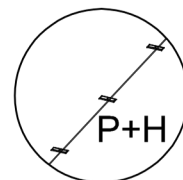


IV

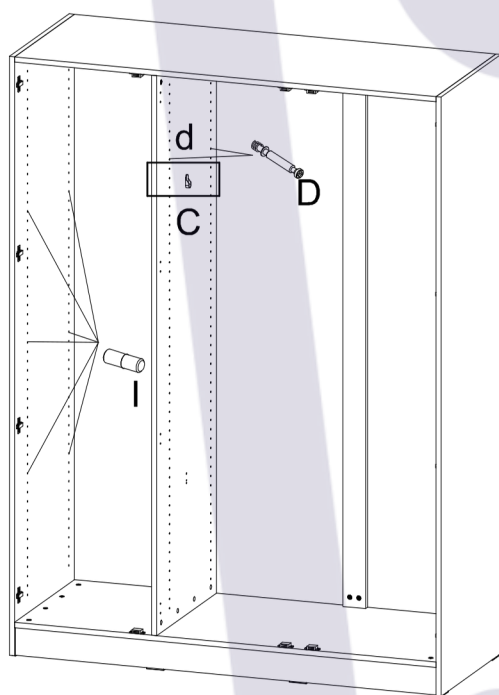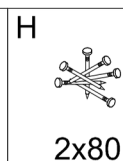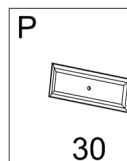





C

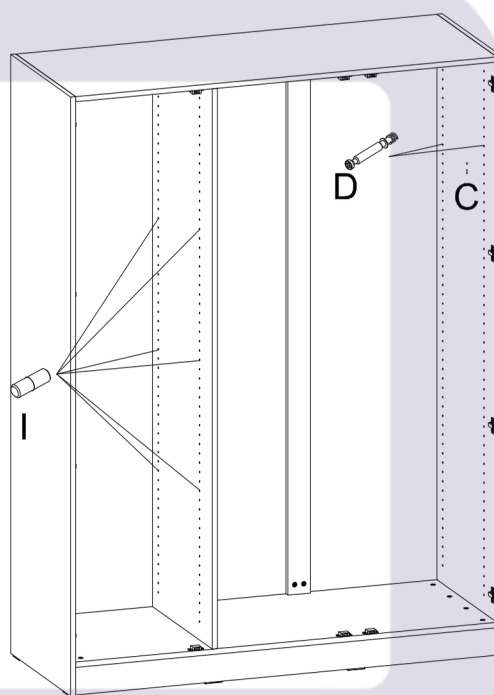


d

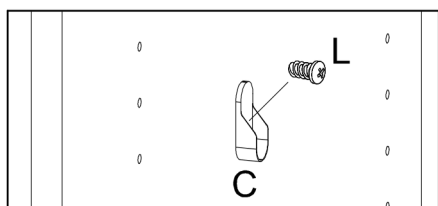

V

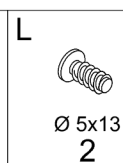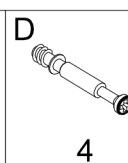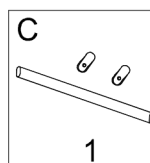

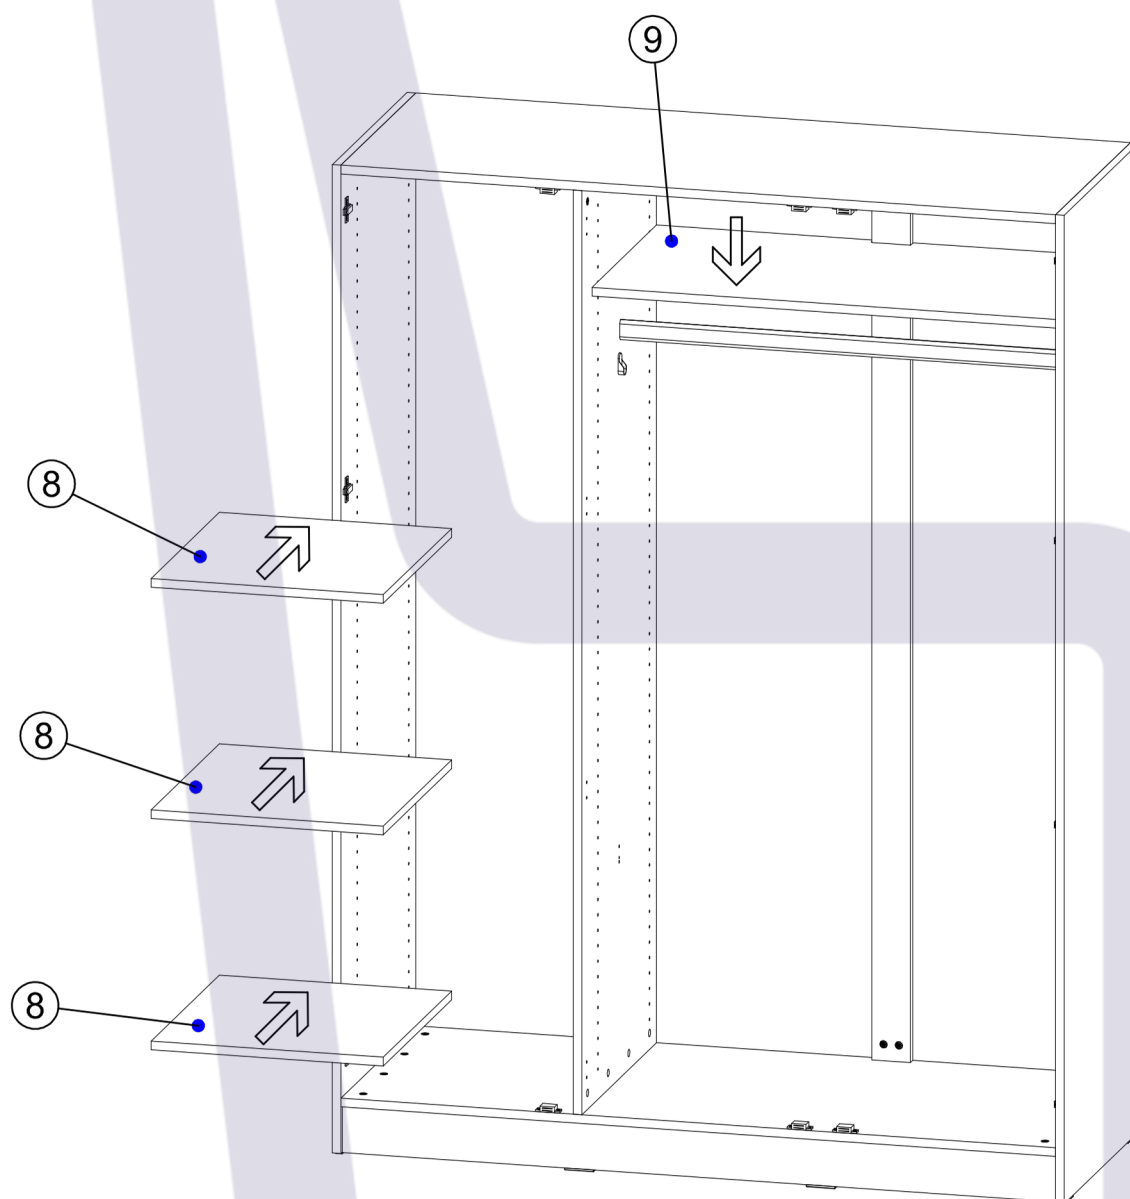



g

VIII

